


Installation Guidelines

EASY-ROB™ DEMO V8.6

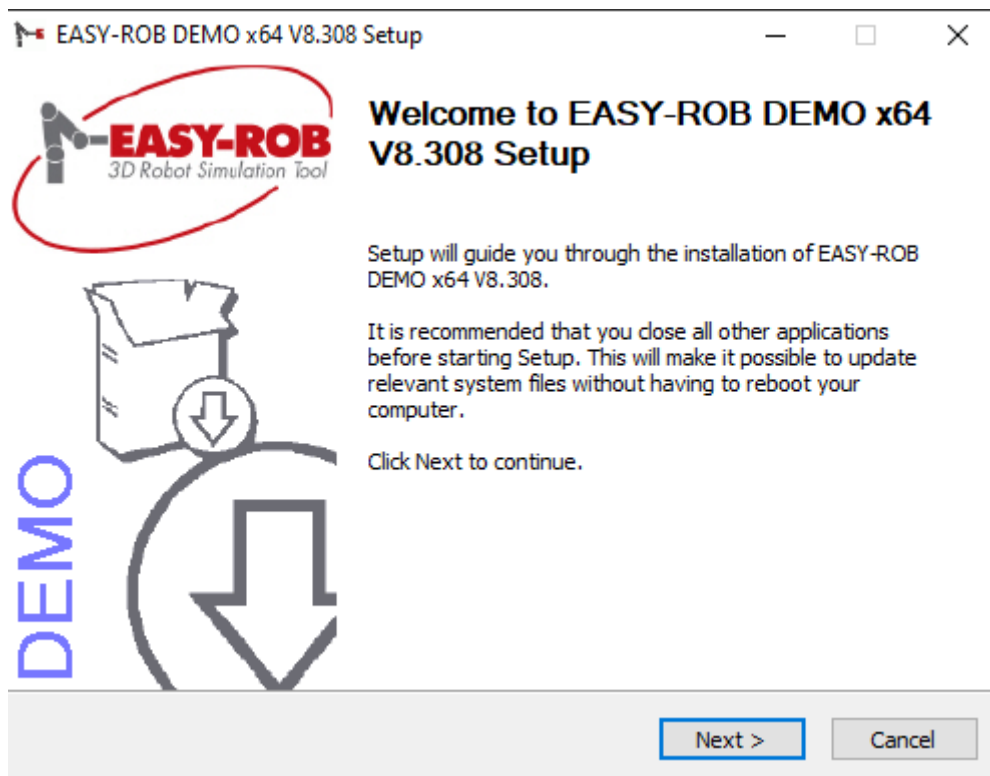

August 2022

Version 3.4



EASY-ROB™

Table of content

Table of contents	3
EASY-ROB™ DEMO Version	4
Installation	4
First steps	7
Contact	9
Notes	10

EASY-ROB™

EASY-ROB™ DEMO Version



Installation guidelines

Installation

The installation guidelines will show step by step how to install the product *EASY-ROB™ DEMO* into the target directory „Program Files “ on a drive „D:\“.


1.
Start the installation by double click on the file
„EASY-ROB Demo Setup x64.exe“

and select the language



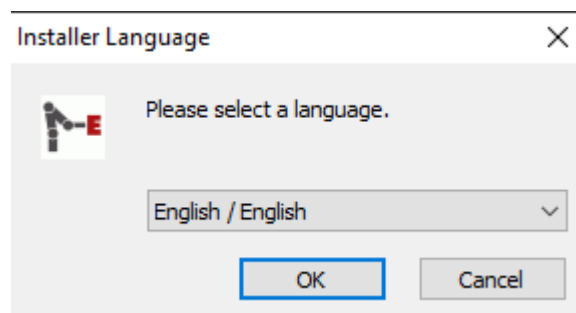



2.
It is recommended to close all other applications before you go on.



Go on with „Next“

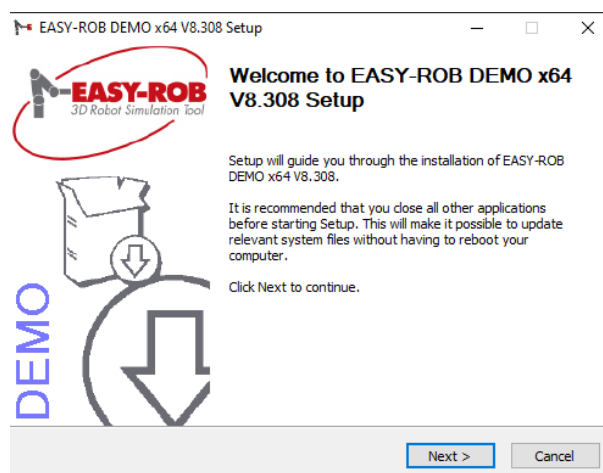

Installation EASY-ROB™ DEMO
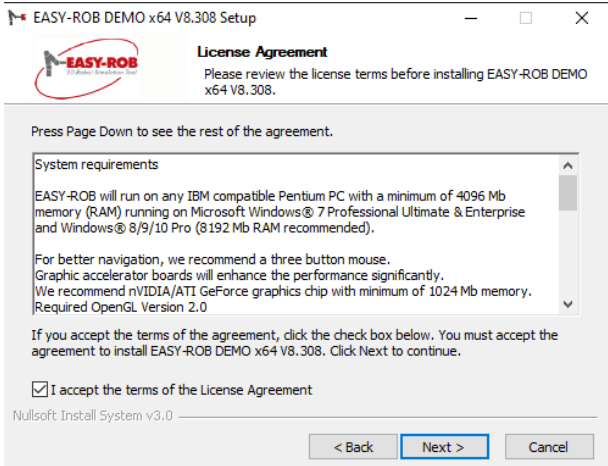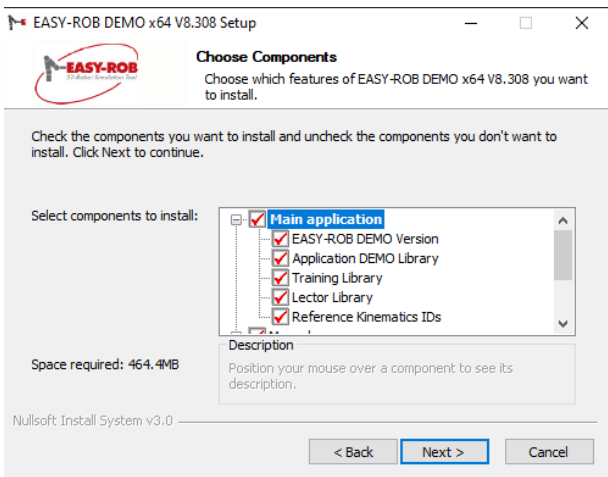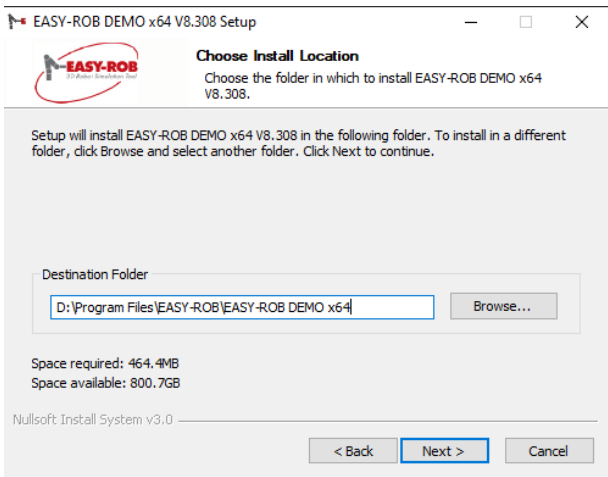
<p>3. Please make sure that your system meets the system requirements and please read the License Agreement.</p> <p>To go on you have to accept the License Agreement.</p>	
<p>4. Now you have to select the components you like to install in addition to the main program:</p> <ul style="list-style-type: none"> • Application DEMO Library (contains examples) • Training- & Lector Library • Documentation (Operation references, ...) • TeamViewer for Quick support und Quick Join <p>Go on with „Next“</p> <p>Note: Missing components can be installed later at any time.</p>	
<p>5. Confirm the target directory respectively set the target directory to:</p> <p><i>D:\Program Files\EASY-ROB \EASY-ROB-DEMO x64\</i></p> <p>Go on with „Next“</p>	

Installation EASY-ROB™ DEMO
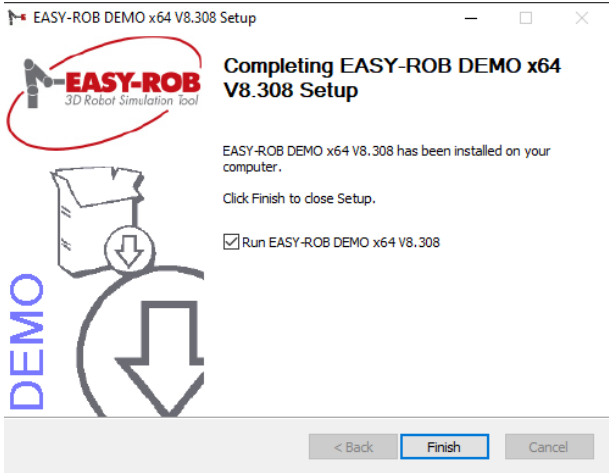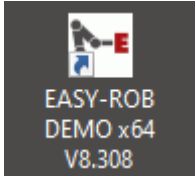
<p>6. After the installation click “Finish” to close the wizard.</p> <p>Note: If Checkbox for „Run EASY-ROB DEMO V7.304“ is checked, the EASY-ROB™ DEMO will start automatically.</p>	
<p>7. You can start EASY-ROB™ either by the icon from the desktop or by the Start menu.</p>	
<p>Note: The Operation References and all other documentation about EASY-ROB™ DEMO are located in the subfolder “Manual” of the EASY-ROB folder in the Start menu.</p>	

EASY-ROB™



EASY-ROB™ DEMO Version

Installation guidelines

First steps

It takes only a few steps to load a work cell and to start a simulation. Please find a brief description below.


1. Start the EASY-ROB™ DEMO by short cut icon or from the Start menu

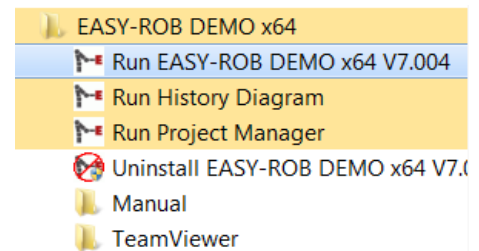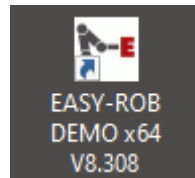


2. Open the library with the button "Start Device Manager":



3. Select from the „ApplicationDEMOLib“ in folder ArcWelding the work cell „ ArcWelding-Chimney-Stove.cel “

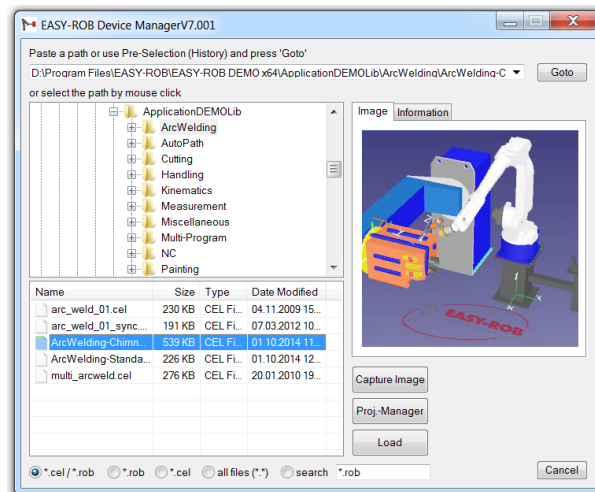

Confirm with "Load" and load the work cell.



4. Start the simulation (Button „Run Program“)



First steps EASY-ROB™ DEMO

Load as well other work cells in the same way from the library and start the simulation.

For further information see the documents:

- Operation-References.pdf
- Operation-References-Functions-PlugIns.pdf
- TrainLib-Tutorial_ENG.pdf (with Training library)
- EASY-ROB-ERPL_ENG.pdf
- EASY-ROB-ShortKeys_ENG.pdf
- EASY-ROB-ProductDescription.pdf
- EASY-ROB-Index.pdf
- Glossar_DE_ENG.pdf
- EASY-ROB-Dialogues.pdf

The documents are located in the subfolder "Manual" of the EASY-ROB folder in the Start menu.



EASY-ROB™

Contact

EASY-ROB Software GmbH

Address: Hauptstrasse 42
65719 Hofheim am Taunus
Germany

Contact: Mr. Stefan Anton

Phone: +49 6192 921 70 77

FAX: +49 6192 921 70 66

Email: contact@easy-rob.com
sales@easy-rob.com

Url: www.easy-rob.com

EASY-ROB customer area

Content: Program updates and robot libraries

Web: <https://easy-rob.com/en/downloads-2/client-area/>

Log in data:
User name: customer
Password: *****



EASY-ROB™

Notes